



## | M2 SERIES THERMOSTATS

0°F to 240°F, Narrow Differential, Hermetically Sealed ½”

### Introduction

The Klixon® M2 thermostat is constructed with a snap-acting bimetal disc that serves as the actuating element. As the temperature reaches a predetermined calibration point, the disc snaps to reverse its curvature, producing the crisp, positive switching action inherent to Klixon® thermostats. This feature assures precision temperature accuracy and long life reliability in any position.

The M2 thermostat is engineered to provide reliable, narrow differential switching in the most demanding applications. Prior to final weld, finished assemblies are vacuum baked and back-filled with dry nitrogen. The inert, dry atmosphere eliminates moisture and other volatiles to prevent condensation at low temperatures or possible contact contamination at high temperatures. This back-fill also improves the dielectric characteristics of the device and prevents oxidation of the contacts. The M2 thermostat is the ideal choice where reliable, narrow differential switching is a must.



Precision temperature accuracy and long life reliability are achieved through the use of the well known Klixon® snap-acting disc. This unique mechanism multiplies the motion of the temperature sensor and actuates a switch capable of handling high power. Welded closed after accurate calibration, the M2 is tamperproof.

### Features

- Hermetically sealed
- Vacuum baked and back-filled with dry nitrogen
- Single pole, single throw (SPST)
- Normally open or normally closed
- Low profile
- Narrow differential
- Preset, non-adjustable calibration
- Long cycle life (250,000 cycles)
- Qualified to MIL-S-24236/20
- Qualified to NASA S-311-641/02

### PERFORMANCE

#### Contact Ratings (Resistive)

Based on standard differential

30 VDC	120 VAC	Life Cycles
2.0 Amps	2.0 Amps	250,000 cycles

#### Characteristics

<b>Switch Action</b>	SPST, normally open or normally closed
<b>Contact Resistance</b>	0.050 ohms maximum, per MIL-STD-202, Method 307
<b>Dielectric Strength</b>	1250 VAC, rms, 60 cycles for 1 minute, terminal to case per MIL-STD-202, Method 301

## Characteristics (continued)

<b>Vibration Resistance</b>	10-2000 Hz, 10G, per MIL-STD-202, Method 204, Condition D, (monitored)
<b>Shock Resistance</b>	100G, 6 milliseconds, per MIL-STD-202, Method 213
<b>Hermeticity</b>	1 X 10 <sup>-8</sup> atm cc/sec. maximum, per MIL-STD-202, Method 112, Condition C
<b>Salt Spray Resistance</b>	Per MIL-STD-202, Method 101, Condition B, 5% solution
<b>Weight</b>	5.4 grams (average)
<b>Ambient Temperature Range</b>	-65°F to 400°F (-53.9°C to +204.4°C), depending on calibrated temperature. Exposure is limited to 100°F above operating temperature for close on rise devices or 100°F below operating temperature for open on rise devices. Consult factory if you need to exceed these limits and we can adjust the switch build to accommodate your needs.
<b>Operating Temperature Range</b>	0°F to 240°F, (-17.8°C to +115.6°C)

The standard operating temperatures, differential and tolerances are shown in the table below, but can be customized to meet your specific requirements.

Closing Temperature Range	Opening Temperature Differential	Closing Temperature Tolerance	
		Standard	Spec.
0 to 240°F (-17 to 115.6°C)	2 to 5°F (1.1 to 2.8°C)	± 4°F (± 2.2°C)	± 3°F (± 1.7°C)

The standard operating temperatures, differential and tolerances are shown in the table below, but can be customized to meet your specific requirements.


## CONFIGURATIONS

The M2 is available in standard and special configurations. The standard configurations provide options for straight, right angle, and 45° terminals as well as a loose mounting bracket. To order a standard M2 thermostat, please use the "Standard M2 Thermostat Part Number Builder".

Special physical constructions of the M2 thermostat are available to provide different mounting options such as a mounting stud, mounting brackets, or wire leads with STYCAST overmold. Some of the common physical constructions include M2S-18, M2S-31, M2S-35, and M2S-39. These are shown below. To order an M2 thermostat with a special physical construction, please use the part number builder labeled "Special M2 Thermostat Part Number Builder".

Both part number builders allow you to specify the complete production part number at time of the component selection.

Standard M2 Thermostat Configurations

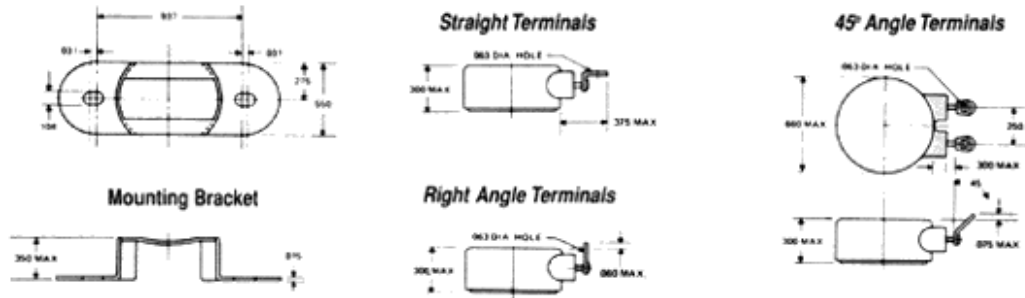

Special M2 Thermostat Configurations





# ORDERING OPTIONS - STANDARD M2 THERMOSTAT

Example : M211L16303052

<b>Part Series</b>	<b>M2</b>	<b>1</b>	<b>1</b>	<b>L</b>	<b>163</b>	<b>03</b>	<b>05</b>	<b>2</b>	<b>1</b>
<b>M2</b>									
<b>Bracket</b>									
1 = No Bracket 2 = Loose Bracket									
<b>Terminal</b>									
1 = Straight 2 = 45° 3 = Right angle									
<b>Operation</b>									
L = Open on rise F = Close on rise									
<b>Closing Temperature*</b>									
Use 3 digits (°F)									
<b>Tolerance*</b>									
03 = +/-3 04 = +/-4 05 = +/-5									
<b>Differential*</b>									
04 = 2 to 4°F 05 = 2 to 5°F 07 = 3 to 7°F 09 = 5 to 9°F									
<b>Plating</b>									
2 = Copper-nickel (standard)									
<b>Contacts</b>									
1 = Silver 2 = Gold plated									

\* See temperature table for standards

For applications that require thermostat certified to the M24236, customers must order to the M24236/20 part number.

For applications that require the thermostat to be certified to NASA S-311-P641/02, customers should contact the factory to ensure the correct part number



# ORDERING OPTIONS - SPECIAL M2 THERMOSTAT

Example : M2SL163030539

<b>Part Series</b>	<b>M2S</b>	<b>L</b>	<b>163</b>	<b>03</b>	<b>05</b>	<b>39</b>
<b>M2S</b>						
<b>Operation</b>						
<b>L</b> = Open to temp. rise <b>F</b> = Close on temp. rise						
<b>Temperature</b>						
Closing temperature °F						
<b>Tolerance</b>						
Closing temperature tolerance (±°F)						
<b>Differential</b>						
<b>05</b> = 2-5°F <b>07</b> = 3-7°F						
<b>Style Select</b>						
e.g.: -39						



## WARNINGS



### RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

**Failure to follow these instructions can result in serious injury, or equipment damage.**



### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

**Failure to follow these instructions will result in death or serious injury.**

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at [www.sensata.com](http://www.sensata.com) SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

## CONTACT US

### Americas

+1 (508)-236-3287  
klixon@sensata.com

### AUTHORIZED DISTRIBUTORS

Flame Enterprises  
Bob Correa, Director of Product Management

+1 (240) 236-9802  
bcorrea@flamecorp.com | Web  
Tel: 1-800-854-2255 or 1-818-700-2905  
Fax: 1-818-407-5080

Peerless Electronics  
Steve Gunther, National Sales Manager

+1 (516) 594-3509  
sgunther@peerlesselectronics.com  
nysales@peerlesselectronics.com | Web  
Tel: 1-800-285-2121  
Fax: 1-800-222-8096

### Europe, Middle East & Africa

Flame Enterprises  
Bob Correa, Director of Product Management  
+1 (240) 236-9802  
bcorrea@flamecorp.com  
info@flamecorp.com | Web  
Tel: 1-800-854-2255 or 1-818-700-2905  
Fax: 1-818-407-5080